



Determining the Correct Remote

Golight, Inc. – Determining the correct remote:

Do you still have the remote? Under the batteries you may find a small decal. It might be a red dot or it might be a silver dot with a letter. It is possible that there is no decal and if that is the case check for a set of seven small three position dip switches. With that information we can supply the proper replacement remote.

1. Does your light have “Sealed Beam” imprinted on the lens of the light? If yes go to “a” If no, go to #2.
 - a. You have a preprogrammed remote transmitter. Separate the rubber suction cup from the base of the light, under one of the corners you will find a circular decal with a letter printed on it ranging from A-L. That letter tells us the programmed remote you need. If you have the transmitter and remove the batteries, you will also find a decal underneath the batteries with the same letter.
2. Does your light have “Golight” imprinted on the Lens? Yes, go to #3.
3. Does your light have “Golight” imprinted on the top of the bezel?
(The bezel is the frame that surrounds the lens) IF yes go to #5, if no go to #4.
4. For the lights with “Golight” imprinted on the lens and not the bezel,
you need remote code #7900-NRD (There were all a different frequency level)
 - a. If you have the transmitter, and take off the battery cover you will see a green panel with switches, when you remove the batteries, there will be no decals under the batteries.
5. For the lights with “Golight” imprinted on the lens and the bezel, you need part # 7900-T or 30100
 - a. If you have the transmitter and take off the battery cover you will see a green panel with switches, when you remove the batteries you will find a red colored circular decal.

**Browning lights are 2003 and older. We do not have remotes for these lights.

**If “GOLIGHT” is not on the bezel then it’s a Lopin. Lopin remotes are “NRD” remotes.
Their circuit boards are gold.