



# Stryker Motor Replacement

Please see Stryker Disassembly before starting Step 1

1. Remove the lamp housing from its cradle and place it in front of the light. Looking down into the light, you will see (5) screws in the base plate: (3) screws on the lamp housing side and (2) screws on the receiver/ motor side of the light. With a Philips screw driver, remove all (5) screws. Once the screws are removed, slide the bulk housing up and out of the light.
2. Unplug the motor you need to replace from the receiver. There are (3) screws that secure each motor to the bulk housing.
3. Replace the motor and secure it with the (3) screws you removed.
4. Pull the power wires tight through the base of the light and insert the bulkhead assembly back into the light's bottom housing. Two tracks run vertically along the left and right side of the bottom housing, line-up the bulkhead assembly with these tracks up before inserting back into the light body. When correct, the base plate of the bulkhead assembly will fit flush with the bottom housing.

NOTE: Make sure the white stopper is small end up and sitting in the track on the base of the light. The stopper needs to be lined-up to fit in the track that is on the bottom of the bulkhead assembly.

5. Reinstall the (5) screws in to the base plate and place the lamp housing back into its cradle.

Please see Stryker Reassembly

