



## ***Stryker Receiver Replacement***

Please see Stryker Disassembly before starting Step 1

1. Remove the lamp housing from its cradle and place it in front of the light. Looking down into the light, you will see (5) screws in the base plate: (3) screws on the lamp housing side and (2) screws on the receiver/motor side of the light. With a Philips screw driver, remove all (5) screws. Once the screws are removed light slide the bulk housing up and out of the light.
2. With the bulk housing out, make sure the white stopper is small end up and sitting in the track on the base of the light. The stopper needs to be lined up to fit in the track that is on the bottom of the bulkhead assembly. (See Picture Below)
3. Unplug the three connectors from the receiver. (Remember their original position and location.)
4. Then remove the (4) Philips screws holding the receiver in place. Position and secure the new receiver in place and reconnect the wires to the receiver.
5. Pull the power wires tight through the base of the light and insert the bulkhead assembly back into the light's bottom housing. Two tracks run vertically along the left and right side of the bottom housing, line-up the bulkhead assembly with these tracks up before inserting back into the light body. When correct, the base plate of the bulkhead assembly will fit flush with the bottom housing.

NOTE: Make sure the white stopper is small end up and sitting in the track on the base of the light. The stopper needs to be lined-up to fit in the track that is on the bottom of the bulkhead assembly.

6. Reinstall the (5) screws in to the base plate and place the lamp housing back into its cradle.

Please see Stryker Reassembly

