



Stryker Disassembly

Step #1

Place Stryker in an inverted position on a scratch free surface. Using a phillips head screwdriver, remove 2 screws that attach bottom and top housing.



Step #2

Check to see if your Stryker unit has the pictured "nipple" and cord cutout.

If YES then go to step 3. If NO, then skip to step 4



Step #3

Tilt lamp straight up and remove 2 phillips head screws.



Step #4

Grasp back side of top housing and pull up to remove.

